



AccuPel DVG-5000 Digital Video Calibration Generator

User Manual
4/12/11

Table of Contents

Introduction	4
22 Versatile Digital Video Formats with 4 Output Signal Types.....	4
Separate High-Precision 10-Bit & 8-Bit Signal Values.....	4
Maximum Accuracy Direct-Drive Digital (D3) Pattern Generation.....	4
Easy-to-Use Infrared Remote Control.....	4
OSD Menus.....	5
USB Control Interface.....	5
Front Panel Controls	6
LED Indicators	6
Output Selector.....	6
Output Indicator LEDs	6
50 Hz / 60 Hz Selection	6
Format Selector	7
Format Indicator LEDs.....	7
Group Selector	7
Group Indicator LEDs	7
Gray Scale Window & Gray Field Values.....	7
Prior & Next Pattern Selector Buttons	8
On Screen Display (OSD).....	9
Pattern Information.....	9
OSD Menu System	9
OSD Menu Navigation.....	9
OSD Menus.....	10
User Level.....	10
Output	10
Sync	11
Misc.....	11
USB Port	11
Defaults (Power Up).....	11
(AVI) InfoFrame*	12
Selected Remote Control Functions	13
Rear Panel I/O	14
Digital RGB/YCbCr Video Output.....	14
USB Input/Output Port	14
+6V DC Regulated Input.....	14
Test Patterns	15
Color 75 Group	15
Color 100 Group.....	15

Special Group	15
PLUGE Group	16
Gray Scale Groups	16
Gray Field Group	17
Characteristics	18
Picture Formats (59.94 & 60.00 Hz based)	18
Picture Formats (50.00 Hz based)	18
Output Formats	19
Calibration Patterns (113 Patterns)	19
Video Output Connector	20
Control Interfaces	20
Power Supply	21
Limited Warranty	22
Appendix 1: USB Interface	23
USB Control Port	23
USB Driver	23
Serial Protocol	23
AccuPel HDG-4000/HDG-3000 Compatibility	23
DVG-5000 Command Syntax	23
Confirmation and Error Messages	23
Query Commands	24
USB Interface Command Tables	24
Appendix 2: IR Remote Control Functions	31
Output Selection	31
Sync Selection	31
Format Selection	32
Pattern Selection	33
Sequential Group & Pattern Selection	33
Direct Group & Pattern Selection	33
User-Defined Pattern List	33
Other Functions	35
On Screen Display (OSD) Systems	35
Pattern Information	35
OSD Menu System	35
OSD Menu Navigation	36
OSD Menus	36

AccuPel DVG-5000 Digital Video Calibration Generator

User Manual

Version 0.91

Safety Information

- Do not expose the DVG-5000 to rain or moisture. Do not operate the DVG-5000 with the covers removed.
- Use only the supplied power module. Route power cords so they will not be stepped on or pinched by anything placed on or against them.
- Keep the DVG-5000 away from wet locations such as bathtubs, sinks, wet basements or swimming pools.
- Unplug the DVG-5000 before cleaning. Use a damp cloth for cleaning. Do not use cleaning fluids or aerosols, which could enter the unit and cause damage, fire or electrical shock.
- Do not attempt to calibrate or service this unit. Never remove the covers. Disconnect it and contact Display Calibrations, LLC directly for service.

Introduction

The AccuPel DVG-5000 Digital Video Calibration Generator is a professional test equipment device exclusively for commercial or industrial calibration and testing of video displays or video processors.

22 Versatile Digital Video Formats with 4 Output Signal Types

The DVG-5000 produces 22 digital video formats compliant with CEA-861-E including:

- 480i/p
- 576i/p
- 720p50/59.94/60
- 1080i50/59.94/60
- 1080p23.98sf/24sf
- 1080p23.98/24/25
- 1080p29.97/30
- 1080p47.95/48
- 1080p/50/59.94/60

All 22 formats are available with YCbCr 4:4:4, YCbCr 4:2:2, RGB-Video, and RGB-PC signal output for compatibility with HDMI[®] and DVI inputs.

Separate High-Precision 10-Bit & 8-Bit Signal Values

To provide maximum accuracy, Luma and Chroma values for ITU Rec. 601 (SD) and ITU Rec. 709 (HD) are computed using 64-bit double-precision floating-point math and then rounded to 8-bit and 10-bit values.

Separate 10-bit and 8-bit component video values are stored for all 113 basic patterns to eliminate accuracy errors that occur when rounding, truncating, or dithering 10-bit output values to create 8-bit output values.

RGB-Video, RGB-PC, and YCbCr 4:4:4 10-bit video values are output by selecting the 30-bit or 36-bit Deep Color output modes. Users can also select 10-bit or 8-bit YCbCr 4:2:2 (20-bit/16-bit) output.

Maximum Accuracy Direct-Drive Digital (D3) Pattern Generation

For maximum timing accuracy and minimum jitter all video patterns, digital sync, and timing signals are generated using individual low-noise, high-stability, precision crystal oscillators for standard-definition, 59.94 Hz high-definition, and 50/60 Hz high-definition video formats.

A proprietary AccuPel pattern and timing generation IC directly drives the HDMI digital video output transmitter with 30-bit and 24-bit RGB/YCbCr video values depending on output signal type. There is no digital signal truncation, dithering, or color-matrix conversion in the 30-bit or 24-bit digital video path that would reduce bit-level accuracy. No clock synthesizers, format converters, or frame buffers are used to ensure maximum signal timing accuracy.

Easy-to-Use Infrared Remote Control

A 41-key IR remote control is standard to provide maximum standalone ease of use. Dedicated keys are provided to directly select each Output mode, Format mode, Pattern Group, and specific Luma values within Groups. There are also dedicated keys to move forward or backward within Groups or Patterns. Pattern switching is virtually instantaneous because patterns are not loaded from ROM or flash

memory. A user defined Pattern List provides another easy way to switch between favorite patterns. Single key pushes will store or delete up to 10 patterns in the Pattern List, and move forward or backward through the Pattern List.

The IR remote control also provides keys to enter user-defined Luma and Color values, select special features, and to navigate the On-Screen-Display (OSD) menus. Detailed documentation for the IR remote control can be downloaded from <http://www.accupel.com>.

OSD Menus

OSD (On-Screen-Display) menus provide access to advanced features including the ability to specify user defined Luma and Color values, change output bit-depth, blank individual R/G/B/Y/Cb/Cr output channels, modify color-encoding, set power-up default modes, configure the USB interface, and more options.

USB Control Interface


The USB Control Interface provides full operation of all DVG-5000 functions, including direct selection of every pattern. Detailed documentation for the USB Interface can be downloaded from <http://www.accupel.com>.

Front Panel Controls

LED Indicators

Each time power is applied to the DVG-5000 the PLUGE, Gray Scale, and Gray Field LEDs will illuminate in sequence for about 4 seconds as the generator is initialized.

The inactive Format LEDs blink once when any IR remote control command is received. A rapidly blinking LED indicates that an IR remote control numeric key is expected next (e.g. after Pat# key for direct selection by % value). Any slowly blinking LED indicates that a special feature mode is active (e.g. Slow Edges).

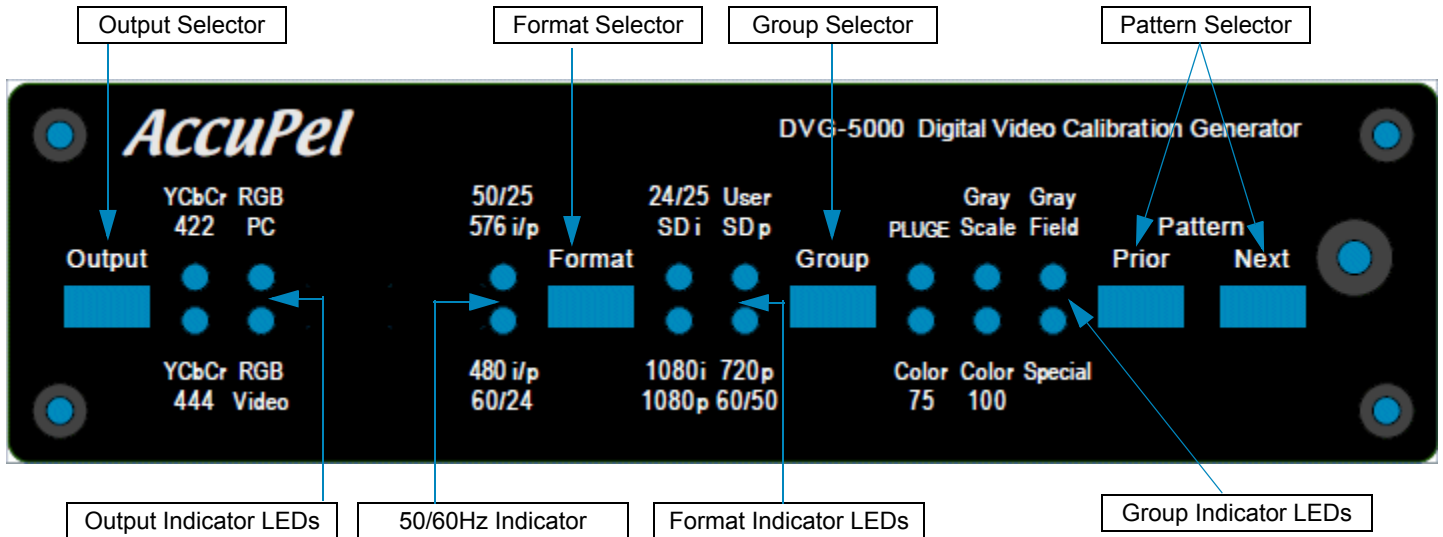

Output Selector

The Output button selects the type of digital video signals produced by the DVG-5000.

YCbCr 4:4:4 signals
RGB-Video signals
YCbCr 4:2:2 signals
RGB-PC signals

Output Indicator LEDs

- YCbCr 444 – YCbCr 4:4:4 signals. *
- RGB Video – RGB-Video signals. *
- YCbCr 422 – YCbCr 4:2:2 signals. *
- RGB PC – RGB-PC signals. **

* Y,R,G,B 64-940 (10-bit) or 16-235 (8-bit), black (0%) to reference white (100%) -7% to 109% total valid range (used in Ramps, High-GS mode, etc.) Cb, Cr 64-960 (10-bit) or 16-240 (8-bit)

** R,G,B 0-1023 (10-bit) or 0-255 (8-bit), black (0%) to reference white (100%)

50/60Hz Selection

50 Hz / 60 Hz Selection

Select 50 Hz modes by pressing and holding the Format button for about 1 second. When the 50 Hz LED illuminates release the Format button. If you continue to hold the Format button the 50 Hz/60 Hz modes will alternate once per second. The 60 Hz LED is illuminated for both 59.94 and 60 Hz formats (selectable in the OSD menu).

*480i, 480p, 576i,
576p, 720p, 1080i,
1080p formats*

Format Selector

Press and release the Format button to change the video format in the following order—1080i, 720p, SD i, SD p, 1080p60(50), 1080p24(25), and a 1080p User selectable format (when 60 Hz is enabled). SD i (SD p) is the standard-definition interlaced (progressive) format—480i(p) in the 60 Hz mode (automatically set to 59.94 Hz), and 576i(p) in the 50 Hz mode.

The 1080p User format can be selected in the OSD Defaults menu to produce 1080p24sf, 1080p30, or 1080p48. All formats can also be selected directly using the IR remote control or the USB control interface.

Format Indicator LEDs

The SD i LED indicates 480i when the 480i/p LED is illuminated, and 576i when the 576i/p LED is illuminated. Similarly, the SD p LED indicates 480p and 576p.

The 1080p LED and one other LED that indicates the 1080p frame rate (60/50/24/25/User) will be illuminated simultaneously to indicate 1080p formats.

Group Selector

The Group button selects a group of patterns. Repeatedly pressing and releasing the Group button circulates through the pattern groups.

Press and hold the Gray Scale Button when the Gray Scale LED is illuminated to cycle from GS to Low-GS to High-GS and back to GS groups.

*8 pattern groups
113 basic patterns*

Group Indicator LEDs

Color 75 - 16 calibration patterns that include color bars and primary, complementary, and gray color windows and color fields at 75% signal levels. User-defined color values can be specified in the OSD User Level/Color menu.

Color 100 - 16 calibration patterns that include color bars and primary, complementary, and gray color windows and color fields at 100% signal levels. User-defined color values can be specified in the OSD User Level/Color menu.

Special - 14 patterns for calibrating or evaluating overscan, horizontal and vertical size, geometry, convergence, contrast, sharpness, banding, and detail enhancement. User-defined checkerboard luma values can be specified in the OSD User Level/Checkerboard menu.

PLUGE - 10 patterns for adjusting black-level, contrast, and color temperature.

Gray Scale - 3 Groups of 14 patterns each for measuring and adjusting linearity, color temperature, gamma, and grayscale tracking. The default group includes 14 patterns with 0%-100% luma values in 10% increments. The Low-GS group includes 14 patterns with 0% to 10% luma values in 1% increments, and the High-GS group includes 14 patterns with 100% to 109% luma values in 0.9% increments. The Low-GS and High-GS groups can be selected from the IR remote control. User-defined window luma values can also be specified in the OSD User Level/Window menu.

Gray Field - 15 patterns for measuring and adjusting full-field uniformity, color temperature, gamma, and grayscale tracking using full-field patterns. User defined full-field luma values can be specified in the OSD User Level/Field menu.

*Gray Scale Window
& Gray Field Values
(binary code)*

Gray Scale Window & Gray Field Values

When the Gray Scale window or Gray Field patterns are changed (from the front panel or the IR remote control) the PLUGE, Color 75, Color 100, and Special LEDs

Front Panel Controls

temporarily produce a binary code that represents the luma value of the window of field. The binary code persists for about 1 second and will then disappear.

Grayscale Window/Field			PLUGE LED	Color 75 LED	Color 100 LED	Special LED
Normal	Low-GS	High-GS	Binary Code Bit 3	Binary Code Bit 2	Binary Code Bit 1	Binary Code Bit 0
10	1	100.9				On
20	2	101.8			On	
30	3	102.7			On	On
40	4	103.6		On		
50	5	104.5		On		On
60	6	105.4		On	On	
70	7	106.3		On	On	On
80	8	107.2	On			
90	9	108.1	On			On
100	10	109.0	On		On	

Gray Scale Window & Gray Field Values (text display)

The LED binary display is for the benefit of users connected to devices other than displays. The OSD Pattern Information provides a direct on-screen text display of the window or field luma value.

Prior & Next Pattern Selector Buttons

Selects the next or prior pattern in the current pattern group.

On Screen Display (OSD)

Pattern Information

Each time a pattern is changed the name of the pattern, which includes important signal identification information, is displayed on-screen for a short duration. The duration can be selected in the OSD Misc menu (approximately 0.25, 0.5, 1.0, 1.5, or 2.0 seconds), and the duration can be saved as a power-up default value. Press the **Info** button on the remote control to display the pattern information continuously. Press the **Info** button again to resume the default display period.


OSD Menu System

The OSD Menu is produced in all digital output signal formats. The OSD Menu provides additional features such as:

- user-defined luma values and colors
- selectable RGB and YCbCr individual channel blanking (set to the black level)
- advanced signal parameters (YCbCr color-encoding, 59.94/60 Hz frame rates HDMI 10-bit and 12-bit Deep Color YCbCr 4:2:2 bit-depth and filtering, Digital Sync Polarity)
- AVI InfoFrame parameters
- USB port control
- user-defined generator power-up default modes.

OSD Menu Navigation

Press the **Menu** button to display the OSD window, which is organized into three columns. The left column of the OSD window currently lists seven menus—User Level, Output, Sync, Misc, USB Port, Defaults, and AVI InfoFrame. Use the cursor keys to highlight (green text) the desired menu, and then move into the middle column and highlight a menu item. The current status of each highlighted menu item is shown in the right column. To change a setting move into the right column and highlight one of the alternative settings that will be listed in that column. In most cases it is not necessary to press the Enter key unless “Enter” appears in the right column. In that case highlight “Enter” and press the remote control Enter key to proceed.

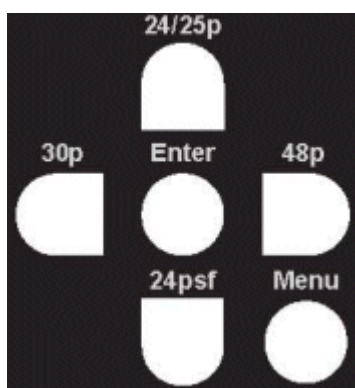

Press the **Menu** button to turn the OSD menu on or off. The highlighted (green text) cursor position in the OSD menu is maintained when the menu is turned on or off, so it is easy to turn the menu off when making measurements or adjusting a calibration setting, and then turn it back on again to make additional changes to the same menu item.

Menu items that are not applicable to the current signal output type are dimmed and not accessible in the menu. For instance, the YCbCr 4:2:2 Filter selection menu item is not accessible unless the YCbCr 4:2:2 output mode is active.

OSD Menu

User Level

- Field** Set a user-defined integer luma % value for the User Field in the Gray Field group. Select Factory and press Enter to restore the original 100% User Field. Select "Cancel" and press Enter to leave the menu without making any change.
- Window** Set a user-defined integer luma % value for the User Window in the Gray Scale group. Select Factory and press Enter to restore the original 100% User Window. Select "Cancel" and press Enter to leave the menu without making any change.
- Checkerboard** Set a user-defined integer luma % value for the User Checkerboard and User Inverse Checkerboard in the Special group. Select Factory and press Enter to restore the original 50% User Checkerboards. Select "Cancel" and press Enter to leave the menu without making any change.
- Color** Set user-defined integer R, G, B % values for the User Window and User Field in the Color 75 and Color 100 groups. The equivalent YCbCr values will automatically be calculated for both ITU Rec. 601 (SD) and ITU Rec. 709 (HD) when using or switching to those output types. The "White" bars in the color bar patterns are also changed to allow comparison with other known colors. Select Factory and press Enter to restore the original 75% gray and 100% white colors. Select "Cancel" to leave the menu without making any change.

The IR Remote Control manual has more information about entering User values.

Output

- Channels** Enable/disable any combination of RGB or YCbCr output signal channels. This allows you to create red, green, blue, yellow, cyan, or magenta RGB geometry, linearity, and ramp patterns, or produce Y (luma) only signals for the color bar patterns. The former can be especially useful for adjusting convergence in displays with separate RGB convergence controls.
- Color Enc** Select standard YCbCr HD/SD ITU Rec. 709/Rec. 601 color-matrix encoding, or reverse the encoding (HD/SD Rec. 601/Rec. 709). This is particularly useful to quickly verify correct display color decoding visually.
- HD V Rate** Select 59.94 or 60.00 Hz field/frame rate for HD signals.

HDMI/DVI	Select HDMI or DVI output. Some older video monitors and computer monitors will not display HDMI protocol signals.
Deep Color	Select 8-bit RGB/YCbCr 4:4:4 digital signals, or RGB/YCbCr 4:4:4 Deep Color 10-bit or 12-bit signal output. Only available when HDMI signal output is also selected.
422 Filer	Select YCbCr 4:2:2 signal filtering On or Off. When Off is selected the Cb/Cr signals are decimated from 4:4:4 to 4:2:2 signals without filtering. Only available when YCbCr 4:2:2 signal output is active.
422 Bits	Select 8-bit or 10 bit YCbCr digital video output signals. Only available when YCbCr 4:2:2 signal output is active.

Sync

HD std +	Select positive or negative HD digital sync. HD standard is positive.
SD std -	Select positive or negative SD digital sync. SD standard is negative.
Position	- Change Hsync (+/- 99 pixels) and Vsync (+/- 15 lines) position. Use with overscan pattern to measure H & V overscan precisely in pixels and lines. Use Pos, Neg, and SoG keys to increment, decrement, and zero (reset) sync position.



NOTE: Some displays don't use sync signals to position the video frame and Sync Position will have no or unpredictable effect on those displays. Some displays use Hsync position to determine the Cb/Cr phase for YCbCr 4:2:2 signals and changing Hsync Position will alter color on those displays.

Misc

Info	Serial number and options information.
Disp Time	Selects the time duration that pattern names are displayed when switching patterns. The IR remote control INFO key will continuously display pattern names if desired.

USB Port

USB Baud	Baud Rate selection.
USB Flow	Flow control selection.

Defaults (Power Up)

60/50 Hz	Power up in 60 Hz or 50 Hz output formats mode.
USB Baud	Power up baud rate.

On Screen Display (OSD)

User Format	Power up with front panel User Format set to output 1080p24sf, 1080p30, or 1080p48.
Disp Time	Power up with the pattern name display duration set to 0.25, 0.5, 1.0, 1.5, or 2.0 seconds.
Save Items	Save all of the above power up default items to non-volatile memory.

*(AVI) InfoFrame**

Output	Auto or manual selection of the Output Signal Type parameter (Auto, Off, RGB, YCbCr 4:2:2, YCbCr 4:4:4).
Color Enc	Auto or manual selection of the YCbCr color encoding parameter (Auto, Off, Rec. 601, Rec. 709).
Levels	Auto or manual selection of the Output Signal Levels parameter (Auto, Off, Video, PC).
Format	Auto or manual selection of the Output Signal Format parameter (Auto, Off).
Pixel Rep	Auto or manual selection of the Output Signal Pixel Replication parameter (Auto, 1x, 2x).

* Only available when HDMI is selected


Selected Remote Control Functions

Please read the IR Remote Control chapter for a complete discussion of additional remote control features including how to enter User Luma & Color Levels, and User Pattern Lists.

- Edge** Selects Fast or Slow digital video edge transitions. The Slow Edge mode changes the edge transition rate of the DVG-5000 signals to a rate chosen specifically for each video format. The currently selected Output LED will blink slowly when the Slow Edge mode is enabled.
- ALT Gray Scale*** Press this button combination to select or alternate between 0%-10% Low-GS (Gray Scale) patterns and 100%-109% High-GS patterns. Press the Gray Scale button only to return to the 0%-100% Gray Scale patterns. The Gray Scale LED will blink slowly when the Low-GS or High-GS mode is enabled.
- Mute** This button produces a 0% black field. Press any button on the remote control (including Mute) to restore the previous pattern.
- Func Mute** Press this button combination to alternate between HDMI and DVI output modes if the OSD menu is not visible on some displays in the HDMI (default) output mode. This is normally only the case on older video displays and computer monitors with DVI only inputs that may be incompatible with HDMI protocols.

*100%-109% patterns are not available for RGB-PC signals because the maximum signal amplitude is 100% (digital 255 or 1023) for RGB PC signals.

Rear Panel I/O

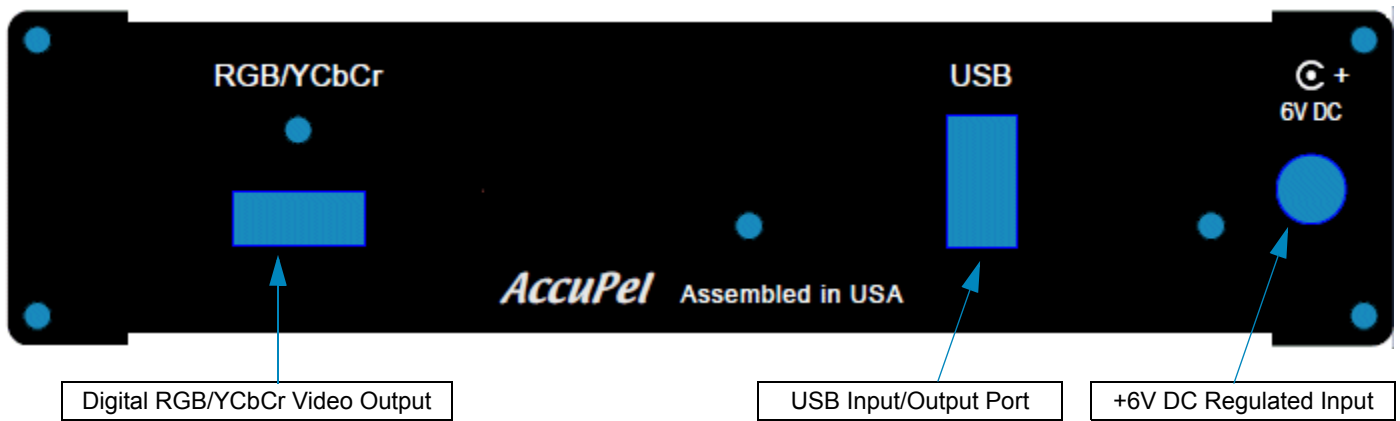

Digital RGB/YCbCr Video Output

The HDMI connector provides RGB-Video, RGB-PC, YCbCr 4:4:4, or YCbCr 4:2:2 digital video signals. A passive HDMI to DVI output adapter or cable can be used to connect to DVI inputs.

USB Input/Output Port

USB input/output. Use a Type A to Type A USB cable to connect the DVG-5000 to a computer. Requires a DVG-5000 USB driver that can be downloaded from <http://www.accupel.com>. (See the DVG-5000 USB Interface manual for details.)

+6V DC Regulated Input

Use the supplied DVG-5000 6V DC regulated power module only. Use of any other power module invalidates the DVG-5000 warranty.

Test Patterns

Color 75 Group

- **75% Tri-split Color Bars** – Check or adjust Color Saturation and Hue controls by matching color bars while individually viewing each primary color. (Use display controls to enable single primary colors, or view through color filters.) Similar to SMPTE Color Bars, but offset and split for easier use.
- **75% Color Bars** - Standard Color Bars at 75% levels.
- **75% Color Windows** – Primary, complementary, and gray windows provide accurate CIE color measurements by using the same screen area.
- **75% Color Fields** – Primary, complementary, and gray fields to measure color field uniformity and chroma noise.

Color 100 Group

- **100% Tri-split Color Bars** – Check or adjust Color Saturation & Hue at 100% levels.
- **100% Color Bars** - Standard Color Bars at 100% levels.
- **100% Color Windows** - Primary, complementary, and gray windows provide accurate CIE color measurements by using the same screen area.
- **100% Color Fields** - Primary, complementary, and gray fields to measure color field uniformity and chroma noise.
- **User Color** - Replaces 75% and 100% gray colors in both Color 75 and Color 100 group patterns to provide easy comparison with other standard colors.

Special Group

- **Low APL Overscan** - Measure/adjust overscan and corner/edge geometry, convergence, and focus. 0% luma background. 0%-7% horizontal and vertical overscan lines in 1% intervals.
- **High APL Overscan** - Measure/adjust overscan and corner/edge geometry, convergence, and focus. 100% luma background. 0%-7% horizontal and vertical overscan lines in 1% intervals.
- **Cross-Hatch** - Low APL pattern to measure geometry & convergence.
- **Inverse Cross-Hatch** - High APL pattern for geometry & convergence.
- **Dual Needle Pulse** – Adjust CRT Contrast. Measure short-term CRT high-voltage stability and check for CRT Scan Velocity Modulation.
- **Color Pixel Multiburst** - Adjust chroma-luma delay and signal peaking (Sharpness/Detail Controls). Red/cyan, black/white, and blue/yellow bursts.
 - 1080p* - 5,4,3,2,1 pixel bursts - 14.85, 18.56, 24.75, 37.13, 74.25 MHz
 - 1080i/p* & *720p* - 5,4,3,2,1 pixel bursts - 7.43, 9.28, 12.38, 18.56, 37.13 MHz
 - 480p* & *576p* – 5,4,3,2,1 pixel bursts - 2.70, 3.38, 4.50, 6.75, 13.5 MHz
 - 480i* & *576i* – 5,4,3,2,1 2x pixel bursts - 1.35, 1.69, 2.25, 3.38, 6.75 MHz
- **Luma Pixel Multiburst** - Adjust signal peaking (Sharpness/Detail Controls).
 - 1080p* - 5,4,3,2,1 pixel bursts - 14.85, 18.56, 24.75, 37.13, 74.25 MHz

1080i/p & 720p - 5,4,3,2,1 pixel bursts - 7.43, 9.28, 12.38, 18.56, 37.13 MHz

480p & 576p - 5,4,3,2,1 pixel bursts - 2.70, 3.38, 4.50, 6.75, 13.5 MHz

480i & 576i - 5,4,3,2,1 2x pixel bursts - 1.35, 1.69, 2.25, 3.38, 6.75 MHz

- **CrossHair** - Check centering and edge artifacts on lines.
- **Sharpness** - 1,2,3,4,5 pixel-width black vertical lines, 1,2,3,4,5 pixel-height (480p/576p/720p/1080p) or 2,4,6,8,10 (480i/576i/1080i) pixel-height black horizontal lines. 50% background. Adjust Sharpness and Detail Enhancement.
- **4x4 100% Checkerboard/Inverse** - Measure ANSI & modified-ANSI contrast ratio at 100% luma levels.
- **4x4 User Level Checkerboard/Inverse** - Measure ANSI & modified-ANSI contrast ratio at multiple luma levels.
- **Linearity Ramps**
8-bit (top) and 10-bit (bottom) Ramps.
1080i/p, 720p 1x, 2x, 4x pixel replication 8-bit Ramps, 1x 10-bit Ramps.
480i/p, 576i/p 1x, 2x pixel replication 8-bit Ramps, 1x 10-bit up/down Ramp.

PLUGE Group

- **0% APL PLUGE** - Calibrate black level and measure black level stability at 0% Average Picture Level. +/- 4% stripes, 0% background.
- **Precision PLUGE** - Calibrate black level with split stepped-bar pattern from 8-bit digital level 11 to digital level 21. Black (digital 16) is center bar.
- **25% APL PLUGE** - Calibrate black level and measure black level stability at 25% Average Picture Level. +/- 4% stripes, 0%/50% split background.
- **50% APL PLUGE with 98%/102% PLUGE** - Calibrate black level and Contrast (for LCoS/LCD/DLP displays), and measure black level stability at 50% APL. +/- 4% & 98%/102% stripes, 0%/100% split background.
- **25%, 50%, 75%, 100% Windows w/PLUGE** - Calibrate color temperature & grayscale tracking. +/- 4% PLUGE pattern to ensure black level doesn't shift while adjusting grayscale tracking.
- **100% Window with 98%/100% PLUGE** - Calibrate color temperature & grayscale tracking. +/- 4% PLUGE pattern to ensure black level doesn't shift, and 98%/100% vertical bars to ensure peak-white level doesn't clip while adjusting grayscale tracking on LCoS/LCD/DLP displays.
- **50/100 IRE Window with PLUGE** - Check 100% window size for CRT blooming while adjusting Contrast. +/- 4% PLUGE to maintain black-level setting.

Gray Scale Groups

- **10-Step Vertical Gray Scale Linearity** - Check grayscale tracking and color temperature.
0%-100% in 10% steps
Low-GS 0%-10% in 1% steps
High-GS 100%-109% in 0.9% steps.
- **10-Step Split Vertical Gray Scale Linearity** - Check grayscale tracking and color temperature.
0%-100% in 10% steps

Low-GS 0%-10% in 1% steps
High-GS 100%-109% in 0.9% steps.

- **10-Step Horizontal Gray Scale Linearity** - Check grayscale tracking and color temperature.
0%-100% in 10% steps
Low-GS 0%-10% in 1% steps
High-GS 100%-109% in 0.9% steps.
- **GS User** - 10, 20, 30, 40, 50, 60, 70, 80, 90, 100%
Low-GS User - 1, 2, 3, 4, 5, 6, 7, 8, 9, 10%
High-GS User - 100.9, 101.8, 102.7, 103.6, 104.5, 105.4, 106.3, 107.2, 108.1, 109.0%
Windows w/PLUGE - Calibrate color temperature, grayscale, and gamma. PLUGE bars ensure black level doesn't shift while adjusting grayscale tracking. The background of the High-GS windows is 100% luma to examine a display's ability to differentiate levels near 100%.

Gray Field Group

- **100%, 0% Gray Field** - Measure full-field (on-off, 0%/100%) contrast ratio.
- **25%, 50%, 75% Gray Fields** - Measure flat field uniformity.
- **User Luma Level Field** - Enter luma value in OSD User Level menu.
- **10-90% Gray Fields** - Measure flat field uniformity, and calibrate gamma and grayscale tracking with full-field output levels.

Characteristics

Picture Formats (59.94 & 60.00 Hz based)

1080p59.94/60 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Progressive Active Picture Area 2200 x 1125 Pixels - Progressive Total Frame 148.35164 (148.5/1.001) / 148.5 MHz Pixel Clock Rates 59.94 Hz / 60.00 Hz Frame Rates
1080p47.95/48 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Progressive Active Picture Area 2750 x 1125 Pixels - Progressive Total Frame 148.35164 (148.5/1.001) / 148.5 MHz Pixel Clock Rates 47.95 Hz / 48.00 Hz Frame Rates
1080p29.97/30 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Progressive Active Picture Area 2200 x 1125 Pixels - Progressive Total Frame 74.17582 (74.25/1.001) / 74.25 MHz Pixel Clock Rates 29.97 Hz / 30.00 Hz Frame Rates
1080p23.976 /24 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Progressive Active Picture Area 2750 x 1125 Pixels - Progressive Total Frame 74.17582 (74.25/1.001) / 74.25 MHz Pixel Clock Rates 23.98 Hz / 24.00 Hz Frame Rates
1080p23.976/24sf (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Segmented Frame Active Picture Area 2750 x 1125 Pixels - Segmented Total Frame 74.17582 (74.25/1.001) / 74.25 MHz Pixel Clock Rates 23.98 Hz / 24.00 Hz Frame Rates
1080i59.94/60 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Interlaced Active Picture Area 2200 x 1125 Pixels - Interlaced Total Frame 74.17582 (74.25/1.001) / 74.25 MHz Pixel Clock Rates 59.94 Hz / 60.00 Hz Frame Rates
720p59.94/60 (per SMPTE 296M CEA 861-E)	1280 x 720 Pixels Progressive Active Picture Area 1650 x 750 Pixels - Progressive Total Frame 74.17582 (74.25/1.001) / 74.25 MHz Pixel Clock Rates 59.94 Hz / 60.00 Hz Frame Rates
480p (per CEA 861-E)	720 x 480 Pixels - Progressive Active Picture Area 858 x 525 Pixels - Progressive Total Frame 27 MHz Pixel Clock Rates 59.94 Hz (60/1.001) Frame Rates
480i (per CEA 861-E)	1440 x 480 Pixels Interlaced Active Picture Area 1716 x 525 Pixels - Interlaced Total Frame 27 MHz Pixel Clock Rates 59.94 Hz (60/1.001) Field Rates, 29.97 Hz (30/1.001) Frame Rates

Picture Formats (50.00 Hz based)

1080p50 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Progressive Active Picture Area 2640 x 1125 Pixels - Progressive Total Frame 148.50000 MHz Pixel Clock Rate 50.00 Hz Frame Rate
1080p25 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Progressive Active Picture Area 2640 x 1125 Pixels - Progressive Total Frame 74.25000 MHz Pixel Clock Rate 25.00 Hz Frame Rate

1080i50 (per SMPTE 274M CEA 861-E)	1920 x 1080 Pixels - Interlaced Active Picture Area 2640 x 1125 Pixels - Interlaced Total Frame 74.25000 MHz Pixel Clock Rate 50.00 Hz Frame Rate
720p50 (per SMPTE 296M CEA 861-E)	1280 x 720 Pixels Progressive Active Picture Area 1980 x 750 Pixels - Progressive Total Frame 74.25000 MHz Pixel Clock Rate 50.00 Hz Frame Rate
576p (per CEA 861-E)	720 x 576 Pixels - Progressive Active Picture Area 864 x 625 Pixels - Progressive Total Frame 27 MHz Pixel Clock Rate 50.00 Hz Frame Rate
576i (per CEA 861-E)	1440 x 576 Pixels Interlaced Active Picture Area 1728 x 625 Pixels - Interlaced Total Frame 27 MHz Pixel Clock Rate 50.00 Hz Field Rate, 25.00 Hz Frame Rate

Output Formats

RGB-Video	8-bit R/G/B 16-235 (0%-100%) 109% maximum 10-bit Deep Color R/G/B 64-940 (0%-100%) 109% maximum
RGB-PC	8-bit R/G/B 0-255 (0%-100%), 100% maximum 10-bit Deep Color R/G/B 0-1023 (0%-100%), 100% maximum
YCbCr 4:4:4	8-bit Y 16-235 (0%-100%) 109% maximum 8-bit Cb/Cr 16-240 10-bit Deep Color Y 64-940 (0%-100%) 109% maximum 10-bit Deep Color Cb/Cr 64-960
YCbCr 4:2:2	8-bit Y 16-235 (0%-100%) 109% maximum 8-bit Cb/Cr 16-240 10-bit Y 64-940 (0%-100%) 109% maximum 10-bit Cb/Cr 64-960

Calibration Patterns (113 Patterns)

Color 75 (16)	<ul style="list-style-type: none"> • 75% Color Bars & 75% Tri-Split Bars • User Color Window/Field • 75% Red/Green/Blue/Cyan/Magenta/Yellow/Gray Window • 75% Red/Green/Blue/Cyan/Magenta/Yellow/Gray Field
Color 100 (16)	<ul style="list-style-type: none"> • 100% Color Bars & 100% Tri-Split Bars, User Color Window/Field • 100% Red/Green/Blue/Cyan/Magenta/Yellow/Gray Window • 100% Red/Green/Blue/Cyan/Magenta/Yellow/Gray Fields

- Special (14)**
 - H/V % Overscan
 - Inverse H/V % Overscan
 - 16:9 Crosshatch
 - 16:9 Inverse Crosshatch
 - Dual Needle Pulse
 - Color Multi-burst
 - Luma Multi-burst
 - CrossHair
 - Sharpness
 - Checkerboard
 - Inverse Checkerboard
 - User Checkerboard
 - User Inverse Checkerboard
 - 8/10-bit Linearity Ramps
- PLUGE (10)**
 - $\pm 4\%$ PLUGE with 0%
 - 25%, 50% Average Picture Level
 - Precision PLUGE 11d-21d Split Stepped-Bars
 - 25%, 50%, 75%, 100% Gray Windows with $\pm 4\%$ PLUGE
 - 100% Gray Window with ± 4 IRE, 98%/100% PLUGE
 - 50%/100% Split Gray Window with $\pm 4\%$, 98%/100% PLUGE
- Gray Scale (14)**
 - 0-100 (0-10) (0-109)* % 10-step Vertical Linearity
 - Low Gray Scale (14) 0-100 (0-10) (0-109)* % 10-step Split Vertical Linearity
 - High Gray Scale (14) 0-100 (0-10) (0-109)* % 10-step Horizontal Linearity
 - User, 10,20,30,40,50,60,70,80,90,100% Windows with $\pm 4\%$ PLUGE
 - User, 1,2,3,4,5,6,7,8,9,10% Windows with $\pm 4\%$ PLUGE
 - User, 100.9,101.8,102.7,103.6,104.5,105.4,106.3,107.2, 108.1, 109.0% Windows with $\pm 4\%$ PLUGE *

* High-GS mode not applicable for RGB-PC signals
- Gray Field (15)**
 - 100% 0%, 25%, 50%, 75% Gray Fields
 - User Level Gray Field, 10,20,30,40,50,60,70,80,90% Gray Fields

Video Output Connector

YCbCr, RGB HDMI connector - R/Cr, G/Y, B/Cb, Pixel Clock (225 MHz max)

Control Interfaces

USB Type A connector, full interface control of all functions

IR Sensor Front panel infrared receiver provides full control of all functions (IR remote control included)

Power Supply

- Power: 100-240 VAC, 50/60 Hz (+/- 3 Hz), less than 3 watts
- Size: 6.5" (W) x 1.75" (H) x 4.5" (D)
- Weight: Approximately 2 lbs, shipping weight approximately 4 lbs.

Limited Warranty

DISPLAY CALIBRATIONS, LLC warrants that its AccuPel products will be free of defects in workmanship and material and conform substantially to published specifications under normal use and service. This warranty is made to the first purchaser of the products and extends for twelve (12) months from the date of sale. The warranty does not apply to products damaged as a result of accident, misuse, neglect, alteration, improper installation, unusual physical or electrical stress or unauthorized repair. No products may be returned to Display Calibrations without its consent. If requested by Display Calibrations, purchaser agrees to provide proof of purchase and to return defective products to Display Calibrations, transportation charges prepaid. Display Calibrations only liability with respect to products that do not meet the foregoing warranty, and for which appropriate transportation arrangements have been made, will be to repair or, at Display Calibrations option, replace defective products or portions thereof.

THE FOREGOING WARRANTY IS IN LIEU OF ALL WARRANTIES EXPRESSED, IMPLIED OR STATUTORY, REGARDING THE PRODUCTS AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ANY OTHER WARRANTY OBLIGATIONS ON THE PART OF DISPLAY CALIBRATIONS.

IN NO EVENT WILL DISPLAY CALIBRATIONS BE LIABLE FOR THE LOSS OF PROFITS OR GOODWILL, OR DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES OF ANY KIND, HOWEVER CAUSED, WHETHER BY DISPLAY CALIBRATIONS BREACH OF WARRANTY OR BY DISPLAY CALIBRATIONS SOLE OR CONCURRENT NEGLIGENCE OR OTHERWISE.

Display Calibrations may change product specifications and warranty policy at any time without notice.

Display Calibrations, LLC
11140 Rockville Pike, 296
Rockville, MD 20852
<http://www.accupel.com>

Appendix 1: USB Interface

USB Control Port

The USB Interface provides complete control of all DVG-5000 functions. The DVG-5000 USB Control Port provides easy connectivity with the many computers that no longer provide RS-232 connectors. The DVG-5000 USB port emulates an RS-232 interface to provide easy compatibility with common PC or Macintosh terminal programs such as HyperTerminal, and provides compatibility with previous RS-232 based software written to control AccuPel Video Generators. RS-232 emulation also provides a serial control interface that is easily accessible from software development tools for users that write their own custom control programs.

USB Driver

USB Driver

To use the DVG-5000 USB port you must first download and install a USB Driver on your computer. PC and Mac USB drivers are available from the AccuPel web site. Full instructions for installing the driver are included with the download. You may then connect the DVG-5000 to a computer using a USB cable with Type A Male connectors on both ends.

Serial Protocol

Serial Protocol

The USB port emulates an RS-232 connection, so the computer (controller) must be set to the proper Com Port protocols when using the USB port. The computer should be set to 8 bits, no parity, and 1 stop bit. It must also be set to match the DVG-5000 baud rate, which can be selected from 9600 baud to 230.4K baud in the OSD menu. DTS/RTS, Xon/Xoff, or no flow control can be selected for the USB port.



NOTE: It is often easier to start with a slow baud rate (e.g. 19200 baud) and no flow control when initially setting up a connection. The higher baud rates of the DVG-5000 are primarily for use when adding new features through firmware updates. Slower baud rates (e.g. 19200 or 9600 baud) are perfectly adequate in normal use.

AccuPel HDG-4000/HDG-3000 Compatibility

Programs previously written for the AccuPel HDG-4000 or HDG-3000 Video Generators will work with all features that are common to the DVG-5000.

Serial Command Syntax

DVG-5000 Command Syntax

The DVG-5000 accepts ASCII text commands. Each command is 2 to 12 characters in length and must be followed by a carriage return (CR) character (ASCII 13). You may not send multiple commands with a single CR. Partial command strings are not valid.

Capital and non-capital characters are accepted, i.e. a = A, B= b.

All spaces and line feed (LF) characters are ignored.

“OK” Message

Confirmation and Error Messages

The DVG-5000 will return “OK” (without quotes), followed by CRLF (ASCII 13, ASCII 10), after executing each valid serial interface command.

“ER” Message

If the DVG-5000 receives an unrecognized character string of 12 characters or less it will return “ER” followed by the unrecognized character string, followed by CRLF. If more than 12 characters are received only the first 12 chars are returned in the error message, and the remaining characters are discarded.

Query Commands**Query Commands**

Query commands end with a question mark (?). Query commands return one or more text strings (each 14 characters maximum), each followed by a CRLF. “OK” followed by CRLF will be returned after the last text string.

To avoid a possible buffer overrun when sending multiple Query commands, wait for the “OK” response before sending the next Query command.

USB Interface Command Tables

DVG-5000 commands are shown in the Command column of the following tables. The Legacy column shows equivalent commands from previous HDG-4000 or HDG-3000 Video Generators that will still be executed by the DVG-5000, and also commands that have no DVG-5000 function but for software compatibility will still be accepted without returning an ER (error) message. The Legacy commands will be depreciated.

Output Commands

Output	Command	Legacy	Notes
Output Types	YCbCr444	YPbPr	Digital YCbCr 4:4:4 signals.
	RGBVideo	RGB	Digital RGB-video level signals (levels: 16-235 or 64-940 for 0%-100%)
	YCbCr422	YPbPrs	Digital YCbCr 4:2:2 signals
	RGBPC		Digital RGB-PC level signals (levels: 0-255 or 0-1023 for 0%-100%)
	DVIModeOn		DVI Mode will turn on, HDMI mode will turn off
	DVIModeOff		DVI Mode will turn off, HDMI mode will turn on
	YCC422B8		YCbCr 4:2:2 8-bit mode
	YCC422B10		YCbCr 4:2:2 10-bit mode
	YCC422FOn		YCbCr 4:2:2 Decimation Filter on
	YCC422FOff		YCbCr 4:2:2 Decimation Filter off
	DeepColor8		Deep Color mode off – 8-bit 4:4:4 video *
	DeepColor10		Deep Color mode on – 10-bit 4:4:4 video *
	DeepColor12		Deep Color mode on – 12-bit 4:4:4 video *
			* command Ignored in DVI or YCbCr422 modes
		YC	No function, but will not return ER
		CVBS	No function, but will not return ER

Format Commands

Formats	Command	Legacy	Notes
Formats	480i		
	480p		
	720p60	720p	Produces 720p59.94 or 720p60
	1080i60	1080i	Produces 1080i59.94 or 1080i60
	1080p24		Produces 1080p23.98 or 1080p24
	1080p24sf		Produces 1080p23.98sf or 1080p24sf
	1080p30		Produces 1080p29.97 or 1080p30
	1080p48		Produces 1080p47.95 or 1080p48
	1080p60		Produces 1080p59.94 or 1080p60
	576i		
	576p		
	720p50		
	1080i50		
	1080p25		
	1080p50		
HD	HDFR59.94		59.94 based field/frame rates (default)
Frame/Field	HDFR60.00		60.00 based field/frame rates
Rate			

Group Commands

Groups	Command	Legacy	Notes
Groups	Color75		These commands are usually not needed. Send Pattern commands instead.
	Color100		
	Special		
	PLUGE		
	Grayscale		Selects NormalGS, LowGS, or HighGS
	Grayfield		
Grayscale	NormalGS	LowIREOff	10% - 100% Grayscale patterns (default)
Sub-Group	LowGS	LowIREOn	1% - 10% Grayscale patterns
Selection	HighGS		100% - 109% Grayscale patterns

Pattern Commands

Groups	Command	Legacy	Notes	
Color75	SplitCB75		Split 75% Color Bars	
	CB75		75% Color Bars	
	RedW75	Red75	75% Red Window	
	GreenW75	Green75	75% Green Window	
	BlueW75	Blue75	75% Blue Window	
	YellowW75	Yellow75	75% Yellow Window	
	CyanW75	Cyan75	75% Cyan Window	
	MagentaW75	Magenta75	75% Magenta Window	
	WhiteW75	White75	75% White Window	
	RedF75		75% Red Field	
	GreenF75		75% Green Field	
	BlueF75		75% Blue Field	
	YellowF75		75% Yellow Field	
	CyanF75		75% Cyan Field	
	MagentaF75		75% Magenta Field	
	WhiteF75		75% White Field	
	UColorWin		User Color Window	
	Color 100	SplitCB100		Split 100% Color Bars
		CB100		100% Color Bars
		RedW100		100% Red Window
GreenW100			100% Green Window	
BlueW100			100% Blue Window	
YellowW100			100% Yellow Window	
CyanW100			100% Cyan Window	
MagentaW100			100% Magenta Window	
WhiteW100			100% White Window	
RedF100		Red100	100% Red Field	
GreenF100		Green100	100% Green Field	
BlueF100		Blue100	100% Blue Field	
YellowF100		Yellow100	100% Yellow Field	
CyanF100		Cyan100	100% Cyan Field	
MagentaF100		Magenta100	100% Magenta Field	
WhiteF100		White100	100% White Field	
UColorField			User Color Field	
Special		Overscan		Overscan
		InvOverscan		1% Lines Inverse Overscan
		XHatch		1% Lines Crosshatch
	InvXHatch		Inverse Crosshatch	
	NeedlePulse		Dual Needle Pulses	
	CMultiBurst		Color Pixel Multiburst	
	MultiBurst		Pixel Multiburst	
	CrossHair		Cross Hair and 4:3 Sizing	
	Sharpness		Sharpness & Detail Enhancement	
	CheckerBrd		Checkerboard	
	InvChkerBrd		Inverse Checkerboard	
	UCheckerBd		User Checkerboard	
	UInvChkerBd		User Inverse Checkerboard	

Pattern Commands

Groups	Command	Legacy	Notes
	RampsMulti1		Multiple Ramps type 1
		CBandwidth	No function, but will not return ER
PLUGE	PLUGE0		0%/0%, 0% APL, +/-4% PLUGE
	PLUGE11-21		Split Stepped-Bars 11d-21d, 16d black
	PLUGE50		0%/50%, 25% APL, +/-4% PLUGE
	PLUGE100		0%/100%, 50% APL, +1-4%, 98/102% PLUGE
	PLUGEW25		25% Window, +1-4% PLUGE
	PLUGEW50		50% Window, +/-4% PLUGE
	PLUGEW75		75% Window, +1-4% PLUGE
	PLUGEW100		100% Window, +1-4% PLUGE
	PLUGEW10098		100% Window, +1-4%, 98/100% PLUGE
	PLUGEW10050		100%/50% Window, +/-4%, 98/100% PLUGE
Gray Scale	GSVert		10-step Vertical Grayscale Bars
	GSSplitVert		10-step Split Vertical Grayscale Bars
	GSHoriz		10-step Horizontal Grayscale Bars
	GSUser		User Value Grayscale Window
	GS10		10%, 1%, or 100.9% Grayscale Window
	GS20		20%, 2%, or 101.8% Grayscale Window
	GS30		30%, 3%, or 102.7% Grayscale Window
	GS40		40%, 4%, or 103.6% Grayscale Window
	GS50		50%, 5%, or 104.5% Grayscale Window
	GS60		60%, 6%, or 105.4% Grayscale Window
	GS70		70%, 7%, or 106.3% Grayscale Window
	GS80		80%, 8%, or 107.2% Grayscale Window
	GS90		90%, 9%, or 108.1% Grayscale Window
	GS100		100%, 10%, or 109% Grayscale Window
			Use NormalGS, LowGS, or HighGS command to select 10%-100%, 1%-10%, or 100%-109%.
Gray Field	GF100		100% Gray Field
	GF0		0% Gray Field
	GF25		25% Gray Field
	GF50a		50% Gray Field - first occurrence in group
	GF75		75% Gray Field
	GFUser		User Value Gray Field
	GF10		10% Gray Field
	GF20		20% Gray Field
	GF30		30% Gray Field
	GF40		40% Gray Field
	GF50		50% Gray Field
	GF60		60% Gray Field
	GF70		70% Gray Field
	GF80		80% Gray Field
	GF90		90% Gray Field

Sync Commands

Sync Modes	Command	Legacy	Notes
HD HV Sync	NegDHDSync		Negative Digital HV HD sync
	PosDHDSync		Positive Digital HV HD sync (std mode)
SD HV Sync	NegDSDSync		Negative Digital HV SD sync (std mode)
	PosDSDSync		Positive Digital HV SD sync
		BiHDYSync	No function, but will not return ER
		TriHDYSync	No function, but will not return ER
		BiHDGSync	No function, but will not return ER
		TriHDGSync	No function, but will not return ER
		HVCOff	No function, but will not return ER
		SoG	No function, but will not return ER
		NegASync	No function, but will not return ER
		PosASync	No function, but will not return ER
		NormHDHVPos	No function, but will not return ER
		SyncPosFall	No function, but will not return ER
		SMPTEHDHVPos	No function, but will not return ER
		SyncPosRise	No function, but will not return ER
		SyncDel+5	No function, but will not return ER
		SyncDel0	No function, but will not return ER
		SyncDel-5	No function, but will not return ER
		VTngOff	No function, but will not return ER
		VTngOn	No function, but will not return ER

Legacy Commands

Command	Legacy	Notes
	CVBSYC0	No function, but will not return ER
	CVBSYC7 5	No function, but will not return ER
	CVBSCBW0 65	No function, but will not return ER
	CVBSCBW1 0	No function, but will not return ER
	CVBSCBW1 3	No function, but will not return ER
	CVBSCBW2 0	No function, but will not return ER
	CVBSCBW3 0	No function, but will not return ER
	YCCBW0 65	No function, but will not return ER
	YCCBW1 0	No function, but will not return ER
	YCCBW1 3	No function, but will not return ER

Legacy Commands

	YCCBW2 0	No function, but will not return ER
	YCCBW3 0	No function, but will not return ER

User Values Commands

User Value Commands	Command	Legacy	Notes
User Field Value	UvalField		Send command, wait for OK, send integer % text value from 0 to 1 09 ex "UvalFiekf" (CR), ["OK"], "65"(CR)
User Window Value	UvalWindow		Send command, wait for OK, send integer % text value from 0 to 1 09 ex "UvalWmdow"(CR), ["OK"], "83"(CR)
User Checkerboard Value	UvalChkrBd		Send command, wait for OK, send integer % text value from 0 to 1 09 ex. "UvalChkrBd"(CR), ["OK"], "70"(CR)
User R Color Value	UvalColorR		Send command, wait for OK, send integer % text value from 0 to 1 09 ex "UvalColorR"(CR), ["OK"], "80"(CR)
User G Color Value	UvalColorG		Send command, wait for OK, send integer % text value from 0 to 1 09 ex "UvalColorG"(CR), ["OK"], "60"(CR)
User B Color Value	UvalColorB		Send command, wait for OK, send integer % text value from 0 to 109 ex "UvalColorB"(CR), ["OK"], "40"(CR)
User Factory Value	UvalColorF		Restores User ColorTS Window to 75% gray Restores UserColoMOO Field to 100% white

Special Features Commands

Special Features	Command	Legacy	Notes
Enable Channels	ChGBR		All channels enabled
	ChG		G or Y channel only enabled
	ChB		B or Pb channel only enabled
	ChR		R or Pr channel only enabled
	ChGB		G/B or Y/Pb channels only enabled
	ChGR		G/R or Y/Pr channels only enabled
	ChBR		B/R or Pb/Pr channels only enabled
YCbCr	CMatrixStd		Standard color matrix encoding (default)
Color Matrix Encoding	CMatrixRev		Reverse Standard color matrix encoding
Edge Transition	FastEdge	YFilterOff	Fast video edges (default)
	SlowEdge	YFilterOn	Slower video edges
			Output LEDs will blink when slow edge mode is enabled
Mute	MuteOn MuteOff		Produces black screen
Reset	ResetAll		Resets all settings to power up state

USB Port Commands

Flow Control	Command	Legacy	Notes
USB Flow	USBFlowNo		None
Control	USCFlowXP		Xon/Xoff Flow Control
	USBFlowCTSP		CTS/RTS Flow Control (default)
		RS232FlowNo	No function, but will not return ER
		RS232FlowXP	No function, but will not return ER

Query Commands


Query Commands	Command	Legacy	Notes
	Ver?		Returns software version number

Appendix 2: IR Remote Control Functions

The AccuPel HDG-4 IR (Infrared) Remote Control provides selection of all calibration patterns, signal settings, and special modes of the AccuPel DVG-5000 Digital Video Calibration Generator. It is also used to navigate and select settings in the DVG-5000 On-Screen Display (OSD) menu.

The DVG-5000 inactive Format LEDs flash each time an IR remote control command is received. A rapidly blinking LED indicates that an IR remote control numeric key is expected next (e.g. after Pat# key for direct selection by % value). A slowly blinking LED indicates that a special feature mode is active (e.g. Slow Edges).

Output Selection

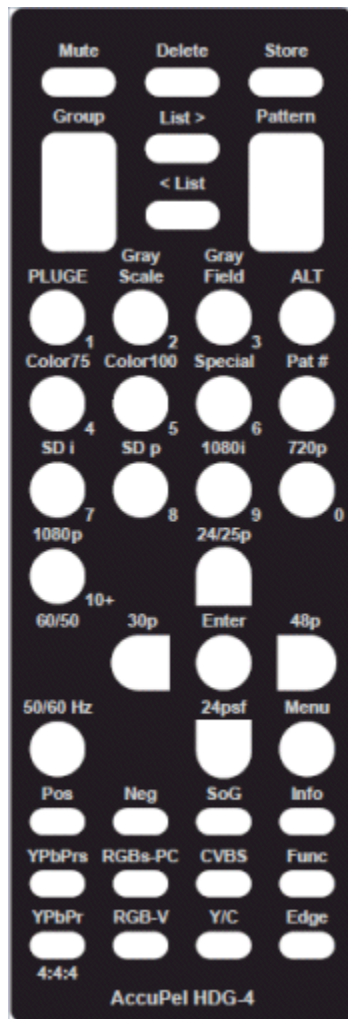

Directly select the Output type for digital video signals.

- YPbPr 4:4:4 - Selects YCbCr 4:4:4 digital video signals. *
- YPbPrs - Selects YCbCr 4:2:2 digital video signals. *
- RGB-V - Selects RGB-Video digital video signals. *
- RGBs-PC - Selects RGB-PC digital video signals. **

* Y,R,G,B 64-940 (10-bit) or 16-235 (8-bit), black (0%) to reference white (100%) -7% to 109% total valid range (used in Ramps, High-GS mode, etc.)
Cb,Cr 64-960 (10-bit) or 16-240 (8-bit)

** R,G,B 0-1023 (10-bit) or 0-255 (8-bit), black (0%) to reference white (100%)

- Y/C - Not applicable to DVG-5000.
- CVBS - Not applicable to DVG-5000.


Sync Selection

Pos, Neg, SoG – Used with Sync/Position OSD Menu item to increment, decrement, and reset (zero) the Hsync and Vsync positions.



NOTE: HV sync polarity for digital signals is set according to the EIA/CEA-861-E standard. But the digital HV sync polarity can be overridden in the OSD Sync menu.

Format Selection

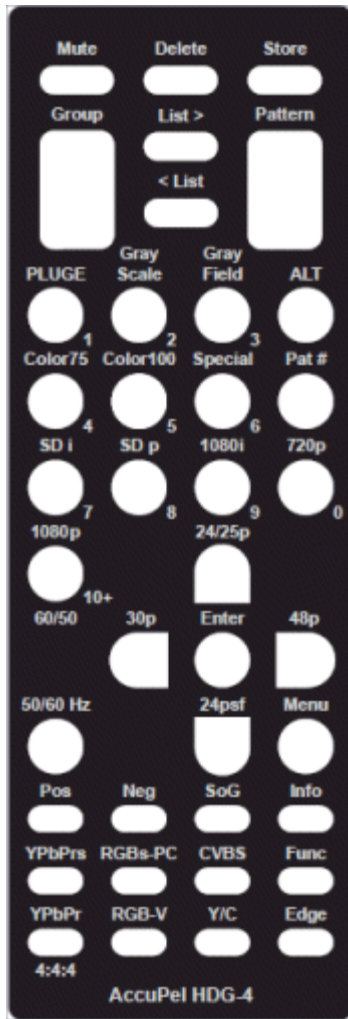

Use this feature to select the desired scan rate.

- **50/60 Hz** – Selects 50 Hz or 60/48/30/24 Hz
- **(59.94/47.95/29.97/23.98 Hz)** generator formats. The selected mode is displayed on the front panel Format LEDs.
- **SD i** – Selects 480i (59.94 Hz) or 576i (50 Hz) signals.
- **SD p** – Selects 480p (59.94 Hz) or 576p (50 Hz) signals.
- **1080i** – Selects 1080i59.94, 1080i60, or 1080i50 signals.
- **720p** – Selects 720p59.94, 720p60, or 1080i50 signals.
- **1080p (60/50)** – Selects 1080p59.94, 1080p60, or 1080p50 signals.
- **ALT 24/25p** – Selects 1080p23.98, 1080p24, or 1080p25 signals.
- **ALT 24psf** – Selects 1080p23.98sf or 1080p24sf (segmented frame) signals.
- **ALT 30p** – Selects 1080p29.97 or 1080p30 signals.
- **ALT 48p** – Selects 1080p47.95 or 1080p48 signals.




NOTE: North American standard formats are based on 59.94 Hz (60/1.001 Hz), which is the power-up default state of the DVG- 5000. You may select 59.94 or 60.00 Hz HD formats in the OSD menu. The 59.94 mode produces the 23.98p, 23.98psf, 29.97p, and 47.95p formats (more precisely they are 24/1.001, 30/1.001, and 48/1.001 respectively).



NOTE: 1080p formats are indicated on the DVG-5000 front panel by illuminating the 1080p LED and the 60/50, 24/25, or User LED. The 24psf, 30p, and 48p modes illuminate the User Format LED.

Pattern Selection

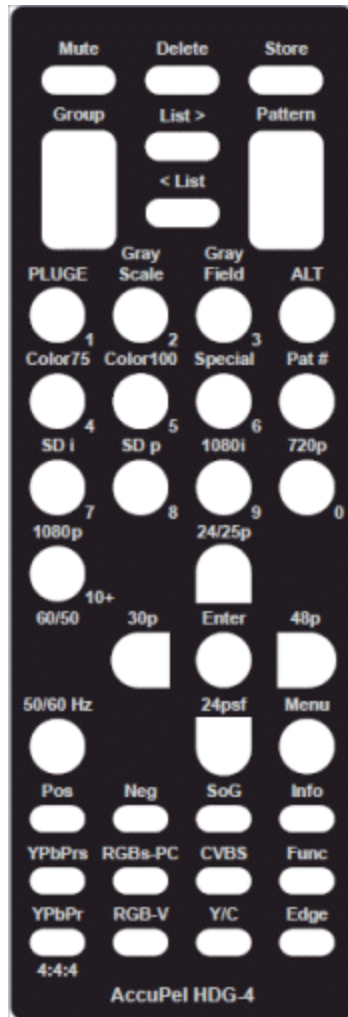

Sequential Group & Pattern Selection

Group

Press the top of the Group rocker key to move forward to the next pattern Group. Press the bottom of the Group rocker key to move backward to the previous pattern group.

Pattern

Press the top of the Pattern rocker key to move to the next pattern in the current pattern group. Press the bottom of the Pattern rocker key to move to the previous pattern in the current pattern group.

Direct Group & Pattern Selection

Color75, Color100, Special, PLUGE, Gray Scale, Gray Field -Directly select one of the 6 major pattern groups.

ALT Gray Scale – Press this key combination to select or alternate between 0%-10% Low-GS (Gray Scale) patterns and 100%-109% High-GS patterns. Press the Gray Scale key only to return to the default 0%-100% Gray Scale patterns. The Gray Scale LED will blink slowly when the Low-GS or High-GS mode is enabled.

Pat

Press the Pat # key followed by a numeric key (0-10) to directly select a pattern in the current pattern group. The active Group LED will flash rapidly while waiting for a numeric key to be pressed. Press any other key to cancel the Pat # entry process.

This function is useful to quickly select a specific grayscale window or field value in the Gray Scale or Gray Field group. Pat# 1 selects the 10% window/field, Pat# 2 selects the 20% window/field, ... Pat# 10 selects the 100% window. (Pat# 0 selects the User Value window/field.) When the 1%-10% Gray Scale pattern group is enabled, Pat# 1 selects the 1% window, Pat# 2 selects the 2% window, etc. The Pat # table on the next page shows the pattern #'s for all groups.

User-Defined Pattern List



Up to 10 patterns can be stored in the user-defined pattern list.

The user-defined pattern list is stored in the DVG-5000 and is discarded if the power is disconnected.

Store - The currently displayed pattern is stored in the userdefined pattern list.

Delete - The currently displayed pattern is deleted from the user-defined pattern list.

List > - The next pattern in the user-defined pattern list becomes the current pattern.

< List - The previous pattern in the user-defined pattern list becomes the current pattern.



NOTE: 100%-109% patterns are not available for RGB-PC signals because the maximum signal amplitude for RGB PC signals is 100% (digital 255 or digital 1023).



NOTE: The background of the High-GS windows is 100% luma to examine a display's ability to differentiate levels near 100%.

Pat # Table

Group						
Pat #	Color75	Color100	Special	PLUGE	Gray Scale	Gray Field
0	75% Split Color Bars	100% Split Color Bars	Overscan	0% APL PLUGE	User 100 (10) (90) % Window w/PLUGE	User 100% Gray Field
1	75% Color Bars	100% Color Bars	Inverse Over-scan	Precision PLUGE	10 (1) (100.9) % Window w/PLUGE	10% Gray Field
2	75% Red Window	100% Red Window	Crosshatch	25% APL PLUGE	20 (2) (101.8) % Window w/PLUGE	20% Gray Field
3	75% Green Window	100% Green Window	Inverse Cross-hatch	50% APL PLUGE	30 (3) (102.7) % Window w/PLUGE	30% Gray Field
4	75% Blue Window	100% Blue Window	Dual Needle Pulse	25% Window w/PLUGE	40 (4) (103.6) % Window w/PLUGE	40% Gray Field
5	75% Yellow Window	100% Yellow Window	Color Multi-burst	50% Window w/PLUGE	50 (5) (104.5) % Window w/PLUGE	50% Gray Field
6	75% Cyan Window	100% Cyan Window	Multi-burst	75% Window w/PLUGE	60 (6) (105.4) % Window w/PLUGE	60% Gray Field
7	75% Magenta Window	100% Magenta Window	Cross Hair	100% Window w/PLUGE	70 (7) (106.3) % Window w/PLUGE	70% Gray Field
8	User 75% Gray Window	User 100% Gray Window	Sharpness	100%Window w/98% PLUGE	80 (8) (107.2) % Window w/PLUGE	80% Gray Field
9	75% Red Field	100% Red Field	100% / 0% Checkerboard	50/100 % Window w/PLUGE	90 (9) (108.1) % Window w/PLUGE	90% Gray Field
10	75% Green Field	100% Green Field	100% / 0% Inv Checkerboard		100 (10) (109) % Window w/PLUGE	100% Gray Field

Other Functions

Edge

Selects Fast or Slow digital video edge transitions. The Slow Edge mode changes the edge transition rate of the DVG-5000 signals to a rate chosen specifically for each video format. The currently selected Output LED will blink slowly when the Slow Edge mode is enabled.

Mute

This key produces a 0% black field. Press any key on the remote control (including Mute) to restore the previous pattern.

Func

Press and release Func key prior to a second key to select additional functions and shortcuts. Any second key not assigned a Func combination cancels the Func key.

Func Func

Cancels the Func key.

Func '8'

Enables 8-bit signals in YCbCr 4:2:2 Output mode, or 8-bit signals for all 4:4:4 (YCbCr 4:4:4, RGB-Video, RGB-PC) Output modes. Status is shown in OSD menu.

Func '10'

Enables 10-bit signals in YCbCr 4:2:2 Output mode, or 10-bit Deep Color signals for all 4:4:4 (YCbCr 4:4:4, RGB-Video, RGB-PC) Output modes. Status is shown in OSD menu

Func Edge

Alternates between YCbCr 4:2:2 decimation filter on and off. Status is shown in OSD menu

Func Mute

Press this key sequence to alternate between HDMI[®] and DVI output modes if the OSD menu is not visible on some displays in the HDMI (default) output mode. This is normally only the case on older video displays and computer monitors with DVI only inputs that may be incompatible with HDMI protocols.

On Screen Display (OSD) Systems

Pattern Information

Each time a pattern is changed the name of the pattern, which includes important signal identification information, is displayed on screen for a short duration. The duration can be selected in the OSD Misc menu (approximately 0.25, 0.5, 1.0, 1.5, or 2.0 seconds), and the duration can be saved as a power-up default value.


Info – Press the Info key on the remote control to display the pattern information continuously. Press the Info key again to resume the default display period.

OSD Menu System

The OSD Menu is produced in all digital output signal formats. The OSD Menu provides additional features such as user-defined luma values and colors, selectable RGB and YCbCr individual channel blanking (set to the black level), advanced signal parameters (YCbCr color-encoding, 59.94/60 Hz frame rates, HDMI 10-bit and 12-bit Deep Color, YCbCr 4:2:2 bit-depth and filtering, Digital Sync Polarity), AVI

InfoFrame parameters, USB port control, and the ability to specify generator power-up default modes.

OSD Menu Navigation

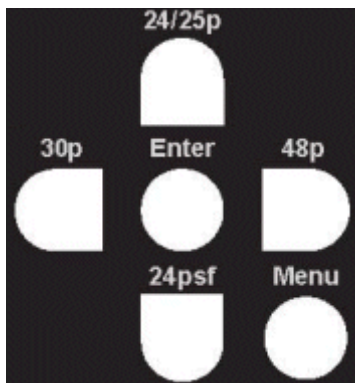

Press the **Menu** button to display the OSD window, which is organized into three columns. The left column of the OSD window currently lists seven menus:

- User Level
- Output
- Sync
- Misc
- USB Port
- Defaults
- AVI InfoFrame

Use the cursor keys to highlight (green text) the desired menu, and then move into the middle column and highlight a menu item. The current status of each highlighted menu item is shown in the right column. To change a setting move into the right column and highlight one of the alternative settings that will be listed in that column. In most cases it is not necessary to press the **Enter** key unless "Enter" appears in the right column. In that case highlight **Enter** and press the remote control **Enter** key to proceed.

Press the **Menu** key to turn the OSD menu on or off. The highlighted (green text) cursor position in the OSD menu is maintained when the menu is turned on or off, so it is easy to turn the menu off when making measurements or adjusting a calibration setting, and then turn it back on again to make additional changes to the same menu item.

Menu items that are not applicable to the current signal output type are dimmed and not accessible in the menu. For instance, the YCbCr 4:2:2 Filter selection menu item is not accessible unless the YCbCr 4:2:2 output mode is active.

OSD Menus

User Level

Field

Use the numeric [0-9] keys followed by the Enter key to enter a luma integer value from 0-109% for the User Field in the Gray Field group. To restore the original 100% User Field select Factory and press Enter. Select "Cancel" and press Enter to leave the menu without making any change.

Window

Use the numeric [0-9] keys followed by the Enter key to enter a luma integer value from 0-109% for the User Window in the Gray Scale group. To restore the original 100% User Window select Factory and press Enter. Select "Cancel" and press Enter to leave the menu without making any change.

Checkerboard

Use the numeric [0-9] keys followed by the Enter key to enter a luma integer value from 0-109% for the User Checkerboard and User Inverse Checkerboard in the Special group. To restore the original 50% Checkerboard luma value select Factory and press Enter. Select "Cancel" and press Enter to leave the menu without making any change.

Color

Use the Up and Down cursor keys to select the R, G, or B entry field. Use the numeric [0-9] keys to enter R, G, or B integer values from 0-109%. Press the Enter key to enter the R, G, B values as the new color of the User Window and User Field in the Color 75 and Color 100 groups. The "White" bars in the color bar patterns are also changed to allow comparison with other known colors. To restore the original 75% gray and 100% white colors select Factory and press Enter. Select "Cancel" to leave the menu without making any change.



NOTE: After you enter the value changing process you can only exit that process by completing a value entry, by highlighting Factory and pressing Enter to reset the value(s), or by highlighting Cancel and pressing Enter. After you Cancel or Enter a new value, a "Change" option is highlighted in the menu.

Press **Enter** to repeat the User value entry process, or press the left cursor key to move to another menu item.



NOTE: As you enter digits the digits shift to the left. Press zeros to clear a mis-typed number without using Cancel to exit the menu.

Output

Channels

Enable/disable any combination of RGB or YCbCr output signal channels. This allows you to create red, green, blue, yellow, cyan, or magenta RGB geometry, linearity, and ramp patterns, or produce Y (luma) only signals for the color bar patterns. The former can be especially useful for adjusting convergence in displays with separate RGB convergence controls.

Color Enc

Select standard YCbCr HD/SD ITU Rec. 709/Rec. 601 color-matrix encoding, or reverse the encoding (HD/SD Rec. 601/Rec. 709). This is useful to quickly verify correct display color decoding visually.

HD V Rate

Select 59.94 or 60.00 Hz field/frame rates for HD signals.

HDMI/DVI

Select HDMI or DVI output. Some older video monitors and computer monitors will not display HDMI protocol signals.

Deep Color

Select 8-bit RGB/YCbCr 4:4:4 digital signals, or RGB/YCbCr 4:4:4 Deep Color 10-bit or 12-bit signal output. Only available when HDMI signal output is also selected.

422 Filer

Select YCbCr 4:2:2 signal filtering On or Off. When Off is selected the Cb/Cr signals are decimated from 4:4:4 to 4:2:2 signals without filtering. Only available when YCbCr 4:2:2 signal output is active.

422 Bits

Select 8-bit or 10 bit YCbCr digital video output signals. Only available when YCbCr 4:2:2 signal output is active.

Sync

HD std +

Select positive or negative HD digital sync. HD standard is positive.

SD std -

Select positive or negative SD digital sync. SD standard is negative.

Position

Change Hsync (+/- 99 pixels) and Vsync (+/- 15 lines) position. Use with overscan pattern to measure H & V overscan precisely in pixels and lines. Use Pos, Neg, and SoG keys to increment, decrement, and zero (reset) sync position.



NOTE: Some displays don't use sync signals to position the video frame and Sync Position will have no or unpredictable effect on those displays. Some displays use Hsync position to determine the Cb/Cr phase for YCbCr 4:2:2 signals and changing Hsync Position will alter color on those displays.

Misc

Info

Serial number and options information.

Disp Time

Selects the duration of pattern name display. The IR remote control INFO key will continuously display pattern names if desired.

USB Port

USB Baud

Baud rate selection.

USB Flow

Flow control selection.

Defaults (Power up)

60/50 Hz

Power up in 60 Hz or 50 Hz output formats mode.

USB Baud

Power up baud rate.

User Format

Power up with front panel User Format set to select 1080p24sf, 1080p30, or 1080p48.

Disp Time

Power up with the pattern name display duration set to 0.25, 0.5, 1.0, 1.5, or 2.0 seconds.

Save Items

Save all of the above power up default items to non-volatile memory.

(AVI) InfoFrame (HDMI only)

Output

Auto or manual selection of the Output Signal Type parameter (Auto, Off, RGB, YCbCr 4:2:2, YCbCr 4:4:4).

Color Enc

Auto or manual selection of the YCbCr color encoding parameter (Auto, Off, Rec. 601, Rec. 709).

Levels

Auto or manual selection of the Output Signal Levels parameter (Auto, Off, Video, PC).

Format

Auto or manual selection of the Output Signal Format parameter (Auto, Off).

Pixel Rep

Auto or manual selection of the Output Signal Pixel Replication parameter (Auto, 1x, 2x).



NOTE: The AVI InfoFrame menu allows product designers and expert users to troubleshoot display or video processor problems by temporarily disabling or sending an “incorrect” InfoFrame parameter to determine if a device is ignoring a particular parameter or executing it incorrectly. For example, if a display is decoding standard-definition YCbCr signals with the wrong color matrix the user can change the InfoFrame Color Enc parameter to determine whether the display responds to the parameter at all, and if so how it responds to different parameter values.
